

DSP2812A

Party Speaker



Description

This party speaker is provided with 2 wireless microphones and works at rated power of 120W. Designed with 2×8" woofers and 2×2.5" tweeters, it can deliver an optimal listening experience. Besides, it features a variety of audio sources, such as AUX, USB/TF card, FM, Bluetooth, MIC and Guitar, with the priority given to the microphone. Moreover, it holds separate volume control for bass, treble, microphone and echo. With the battery of 18.5V/2600mA, it can work for a long time. And it supports TWS function and recording function. Additionally, its waterproof and dust-proof functions make it suitable for outdoor applications.

Features

- 8"+8"woofer, 2.5"+2.5" tweeter.
- With 2 wireless microphones.
- Plastic case+ inside wooden cabinet
- Battery:18.5V/2600mA.
- Power:120W RMS
- Aux input (3.5mm), USB/TF card input, FM input, Bluetooth input, MIC input, Guitar input.
- Bass/Treble/MIC volume/Echo control.
- EQ selection, microphone priority, recording.
- Bluetooth version: 5.0, TWS function.
- Waterproof (IP×4), dust-proof function.

Specifications

export@dsppa.com / www.dsppatech.com

 
The specifications will be subject to change without prior notice.

Copyright © Guangzhou DSPPA Audio Co., Ltd. All rights reserved.

Model	DSP2812A
Speaker Unit	8"+8"woofer, 2.5"+2.5" tweeter
Power	120W
Battery	18.5V/2600mA
Waterproof	IPx4
Audio Sources	AUX, USB/TF card, FM, Bluetooth, MIC and Guitar
Other Functions	Bass/Treble/MIC volume/Echo control, EQ selection, microphone priority, recording, TWS function
Product Size	320×345×725 mm


Front / Rear Panel

Top Panel

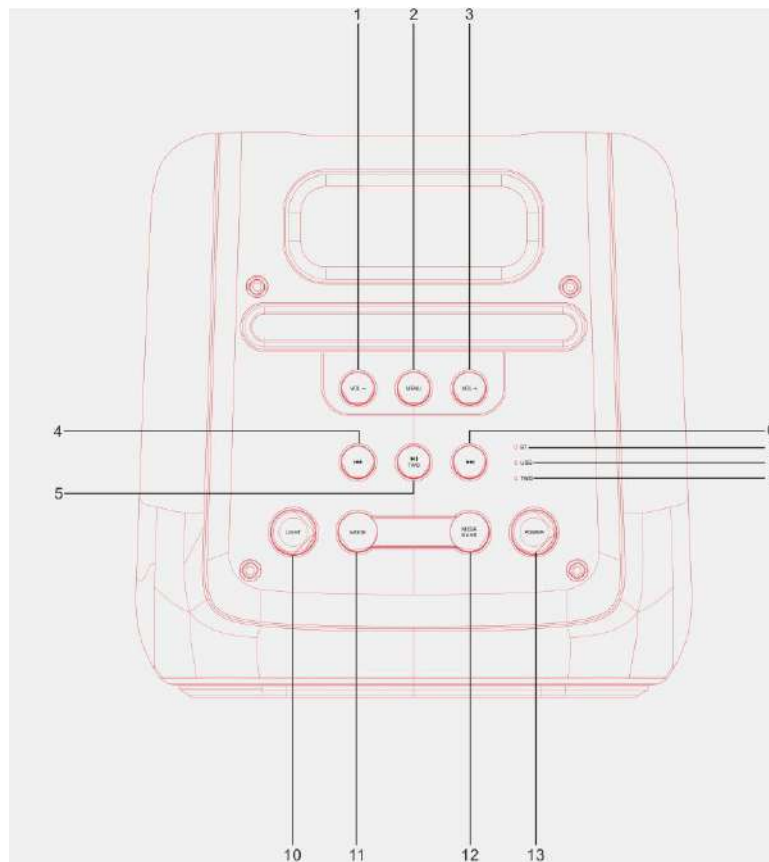

1. Decrease main volume
2. MENU
3. Increase main volume
4. Previous song
5. Short press for Play/Pause; long press 3 seconds for TWS function
6. Next song
7. Show BT state
8. Show USB state
9. Show TWS state
10. Light modes
11. Mode: LINE IN, USB/TF Card/Bluetooth/FM radio
12. Mega bass
13. Power ON/OFF

 Rear Panel

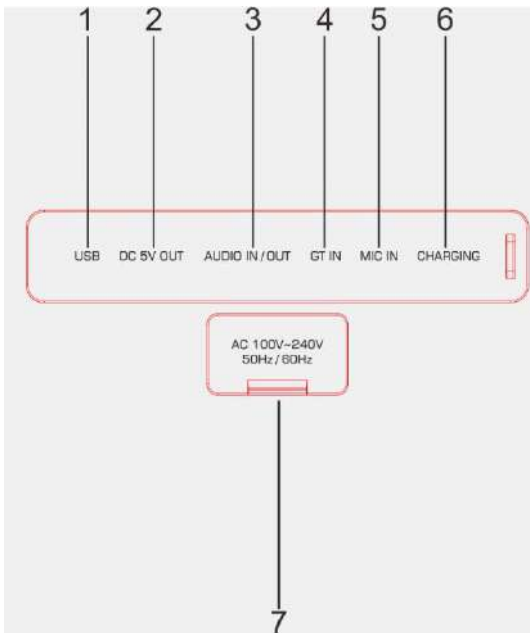

1. USB
2. DC 5V OUT
3. AUDIO IN/out
4. Guitar input
5. Microphone input
6. Charging indicator
7. Charging input

Attention:

If battery is completely drained, suggest that use the speaker under 50% main volume when speaker is charging. Protect the speaker! Play while charging is NOT recommended!

Remote Controller

1. Mute.

Available to be mute at any mode.

2. Previous Song.

Under USB/Micro SD card mode - previous song.

Under BT connection mode- previous song.

Short press this button, will enter previous song. Long press, will fast backward the song.

3. Mode.

Press shortly to skip to Wireless BT/LINE IN/USB/Micro SD mode/FM radio.

4. Record function.

Under USB/Micro SD card mode, press "REC" button to record songs into USB/Micro SD.

Under USB/TF card, when you press this button, use microphone to speak or sing, will memory your words.

5. Echo-: decrease microphone echo.

6. BASS+/-: adjust the bass.

7. EQ function.

8. Microphone Volume+/-: increase or decrease microphone volume.

9. Stand by: when press it, will be on standby state under any modes.

10. Pause&Play/TWS Function: short press, will play music or pause the music. Long press, will enter TWS function.

11. Next song.

Under USB/Micro SD card mode - next song.

Under BT connection mode- next song. Long press, will fast forward the song.

12. Light mode switch. Short press to change light color.

13. Repeat function, Repeat one song, or loop playback the song in USB/Micro SD storage.

14. Record play: play the recording.

15. Record delete: delete the recording.

16. Echo+: increase microphone echo.

17. Microphone priority (When playing music, now you speak via microphone, your sound will override the sound in USB/Micro SD card/Bluetooth).

18. Treble+/-: adjust the treble.

19. Main Volume: adjust the main volume.

20. Number buttons.

Under USB/Micro SD card mode to choose songs.

